


FNX61850

ICD Configuration Software

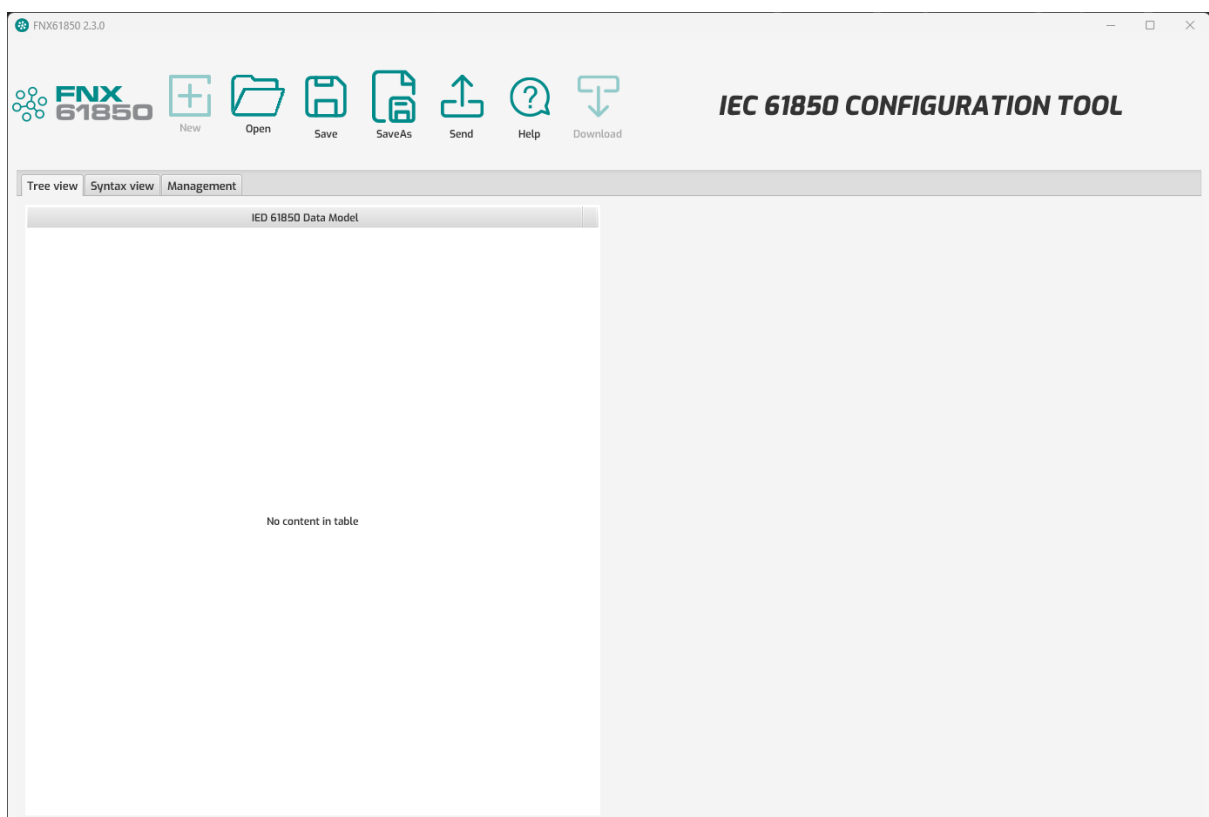

FNX61850 SOFTWARE INSTALATION GUIDE

INSTALLATION

From Fanox Web page, enter the software download page by clicking on the logo.

SOFTWARE

SICOM

RNXtudio

FNX61850

Software para edición de gráficos

[EN / FANOX FNX61850 MANUAL Software R000](#)
[EN_FANOXPC_GUIDE_FNX61850_InstalationGuide_R000](#)



Software version information will be shown. Click on “Download Setup”.

FANOX FNX61850 SOFTWARE

Name:	FNX61850
Version:	2.3.0
Publisher:	Fanox


SETUP DOWNLOAD

Please click the download button if you need to download the installation package.


Download Setup

For starting the installation process, execute the downloaded file.


In case the following warning appears when executing the exe file, click on “more info” and “Run anyway”.

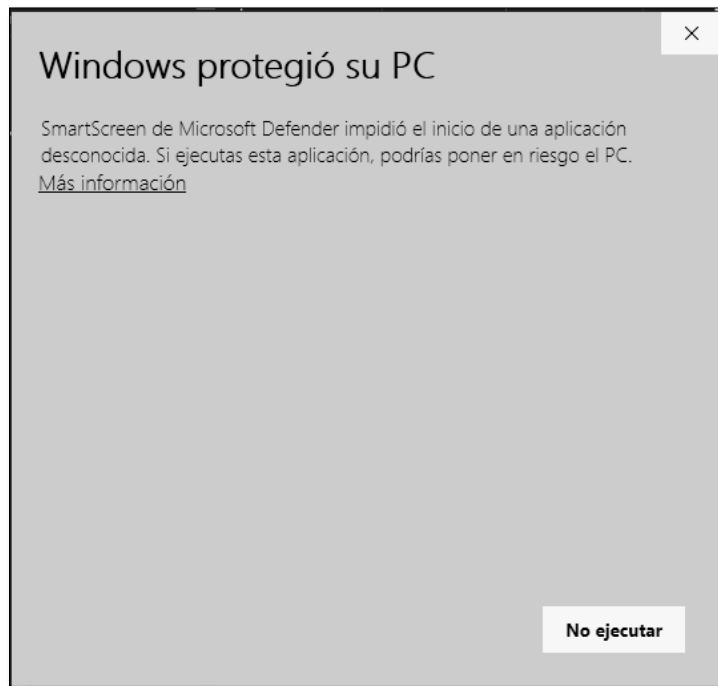


When the setup Wizard appears, click on “Next”.

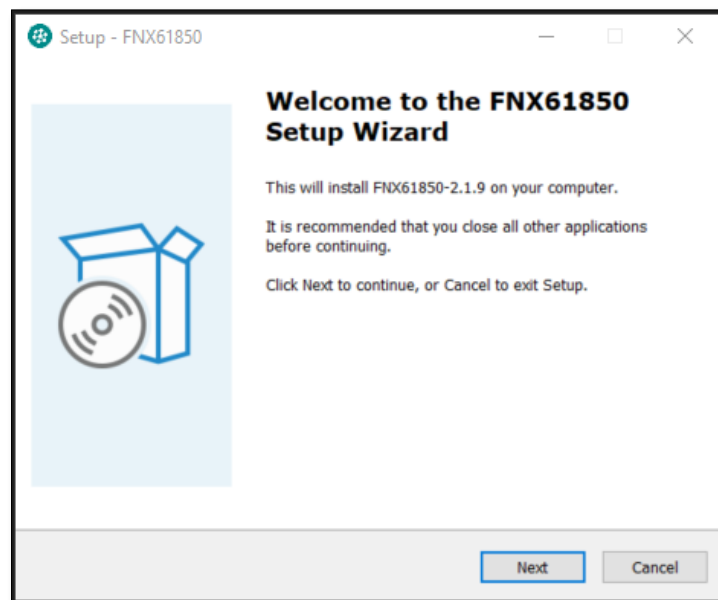


Select the path of installation with “Browse” and accept it with “Next”.

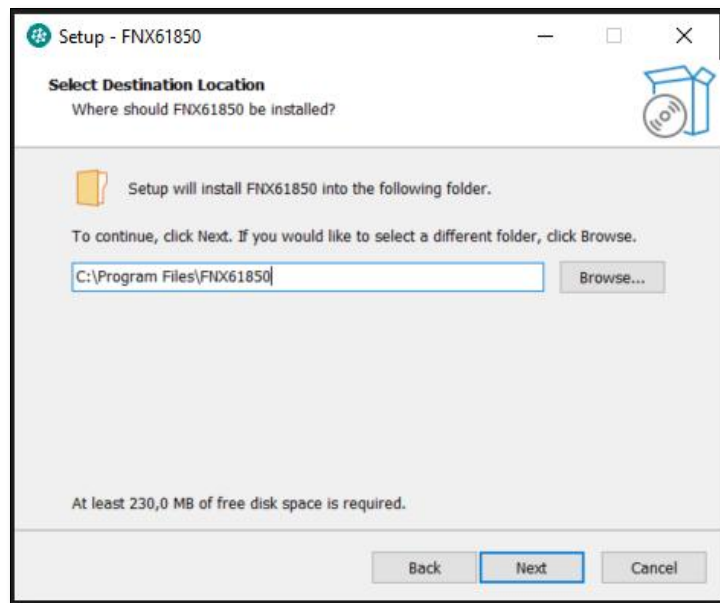


Confirm the selected path with "Install".

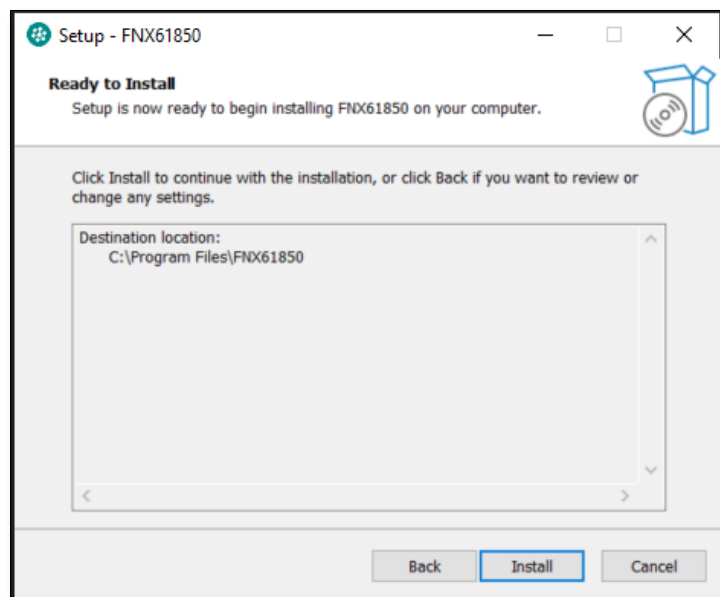

And wait for the installation to finish.

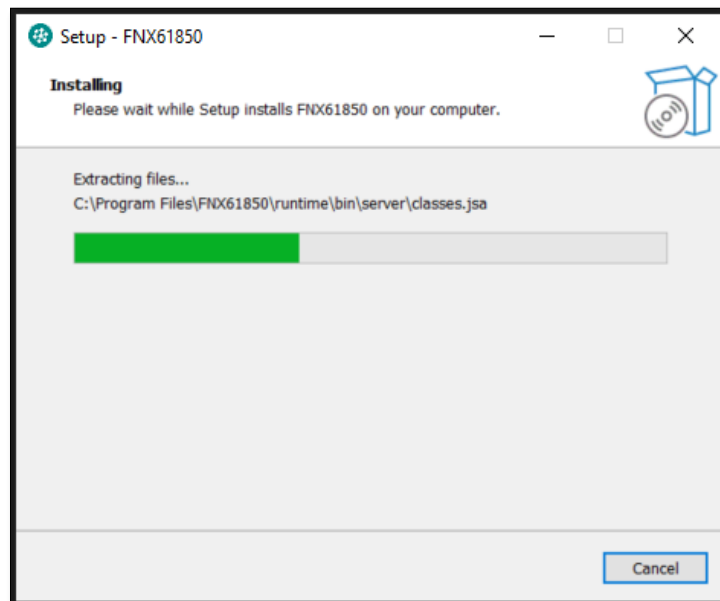


When the process is finished, click on "Finish".

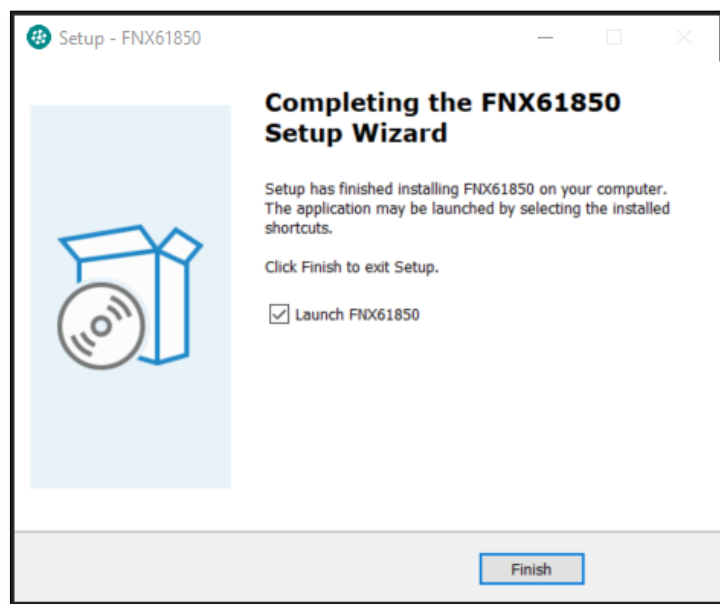


If "Launch FNX61850" is selected, the application will automatically open.

LICENSE

The default license is a DEMO mode as it can be seen on the software name on the top left part of the screen.

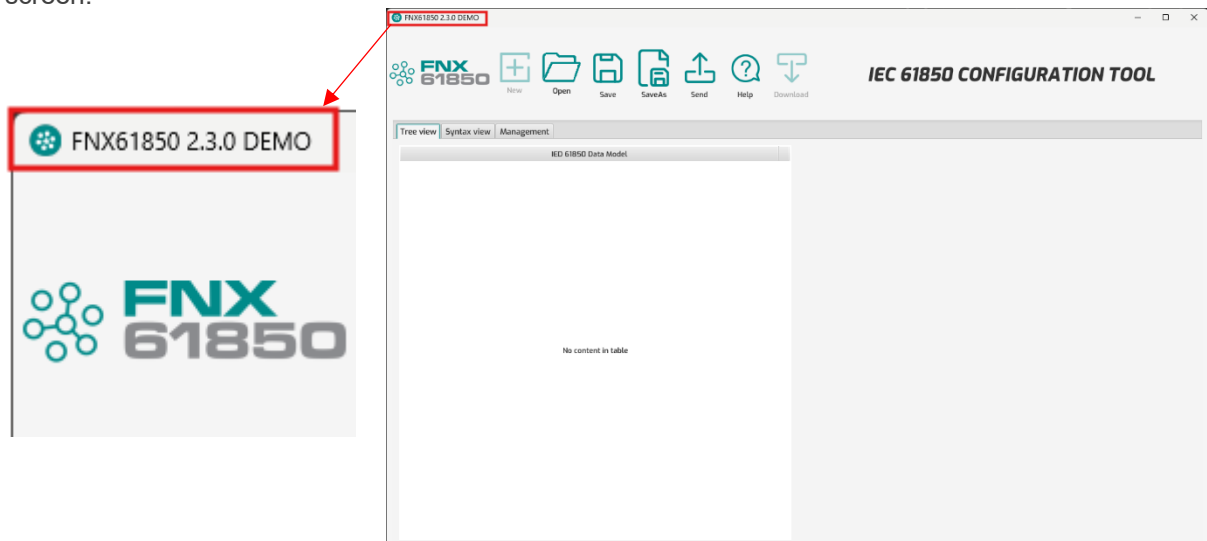


To unlock the functionality, it's necessary to add the client license from the management screen.

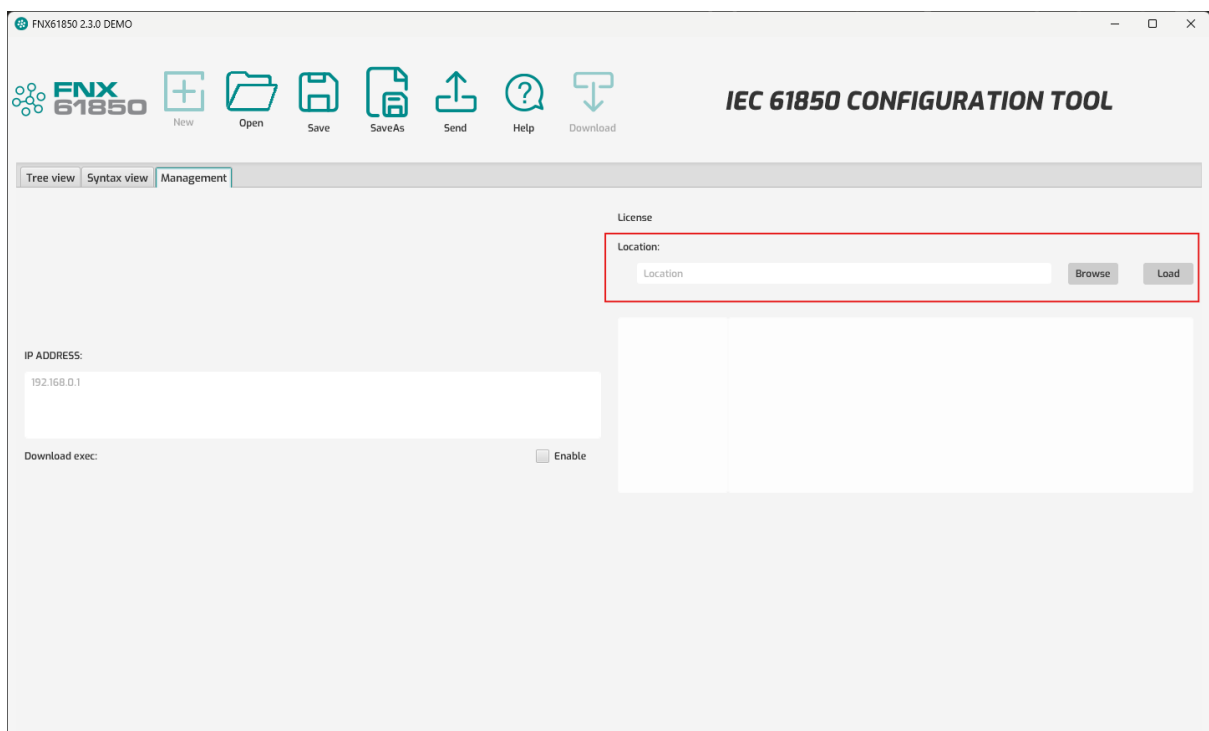


Click on “Browse” to search for the installation path. The license can be found on the following path inside the installation folder:

FNX61850 → extrsrc → lic → license.lic

Select the file. The FNX61850 management screen will show the selected file. Click “Load” and the expiry date and permissions of the license will appear.

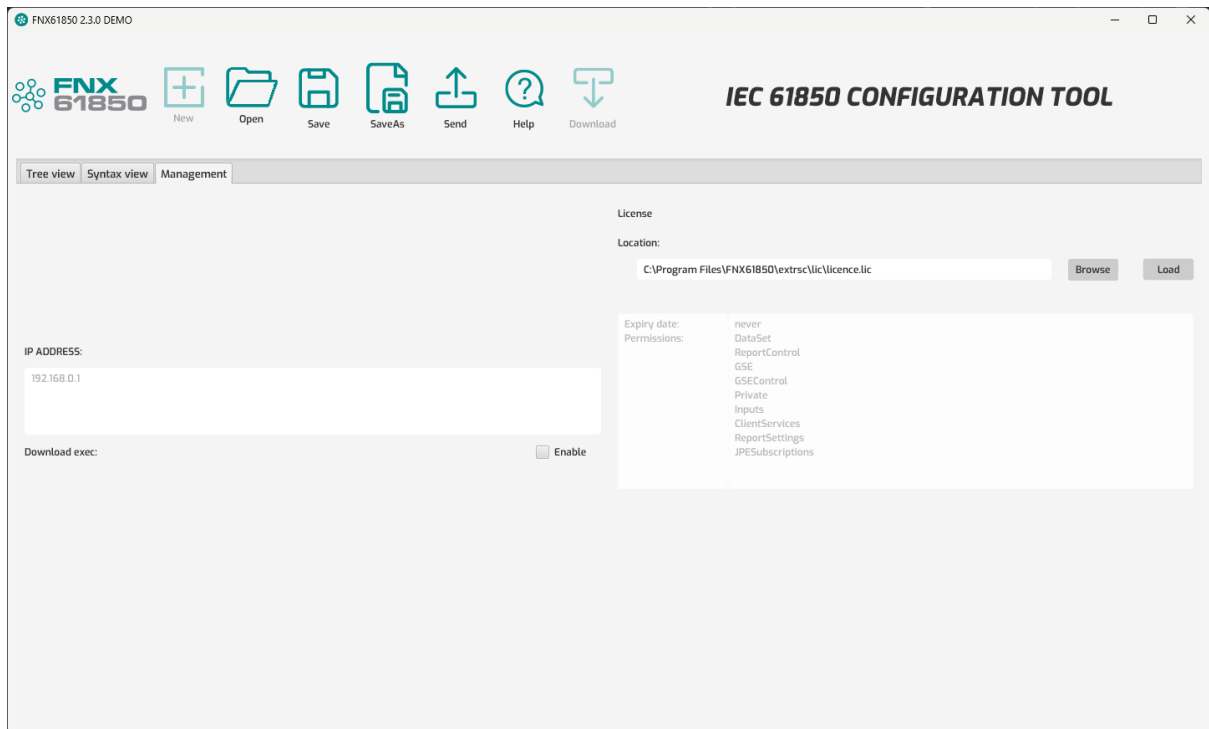

Close the program and open it again to finish the license change process. After this, “DEMO” message will dissappear from the software name on the top left of the screen.

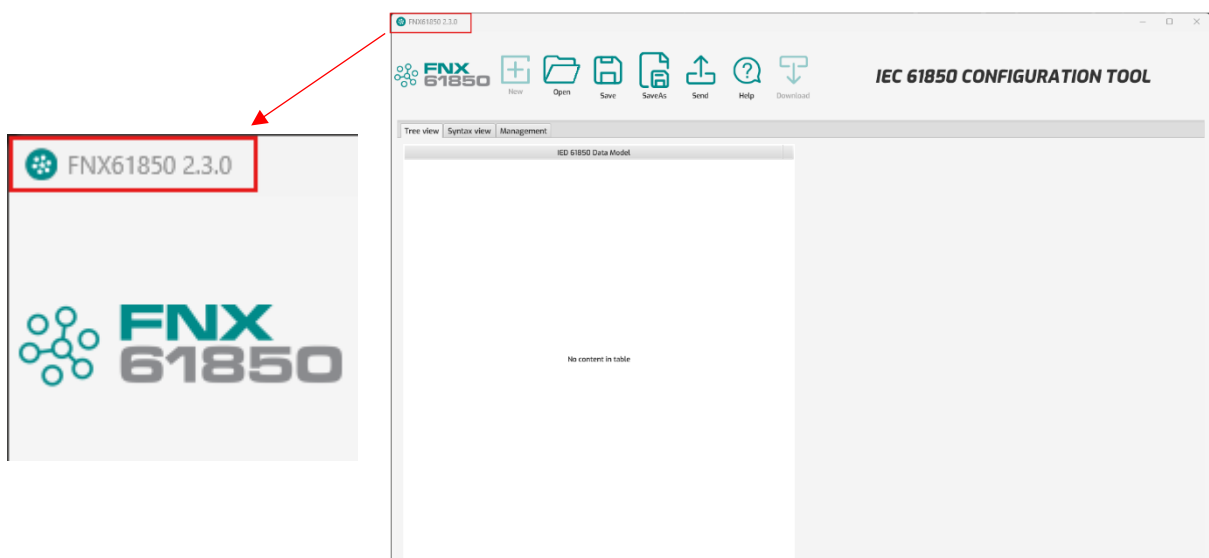

USER MANUAL

The user manual can be found on the “Help” button of the software

